

Question:

I have a fault code on the unit LEDs, what does it mean?

'E' Unit Alarm Codes

LED			Flash Rate ON/OFF (seconds)	Sounder	Condition	Status
Red	Amber	Green				
(I)			ON	OFF	In Operation	Normal
(I)	☀		ON	OFF	Heating Demand	Normal
(I)		❄	ON	OFF	Cooling Demand	Normal
(I)			0.5 / 5.0	OFF	Standby	Normal
(I)			0.5 / 15	OFF	Clock Controlled Standby	Normal
(I)			2 x 0.5 / 15	OFF	Setback	Normal
(I)			0.5 / 0.5	OFF	Filter Clean Advisable*	Normal
	☀		0.5 / 0.5	BEEPS	Network Warning	Call Engineer
		❄	0.5 / 0.5	BEEPS	High Condensate Level	Call Engineer
(I)	☀		0.5 / 0.5	BEEPS	Low Pressure Warning	Call Engineer
(I)		❄	0.5 / 0.5	BEEPS	High Pressure Warning	Call Engineer
(I)	☀	❄	0.5 / 0.5	BEEPS	Contactors Overload Operated	Call Engineer
	☀	❄	0.5 / 0.5	BEEPS	Outdoor Fan Fail	Call Engineer
(I)	☀	❄	ON	BEEPS	Sensor Fault	Call Engineer

*To clear the "Filter Clean Advisable" indication: Press and hold both UP and DOWN arrow keys and the Orange TRANSMIT BUTTON with the handset 'powered up', (all 3 buttons are pressed at the same time).