
SWAP OUT KIT PROCEDURE

BLUEDIAMOND
CONDENSATE REMOVAL PUMPS

WARNING

- Ensure unit is isolated from mains power prior to performing maintenace.
- Maintenance must be performed by a suitably qualified service engineer only.
- Following replacement of the pump, you must perform an operational test as listed on page 13-14 of the instruction manual.

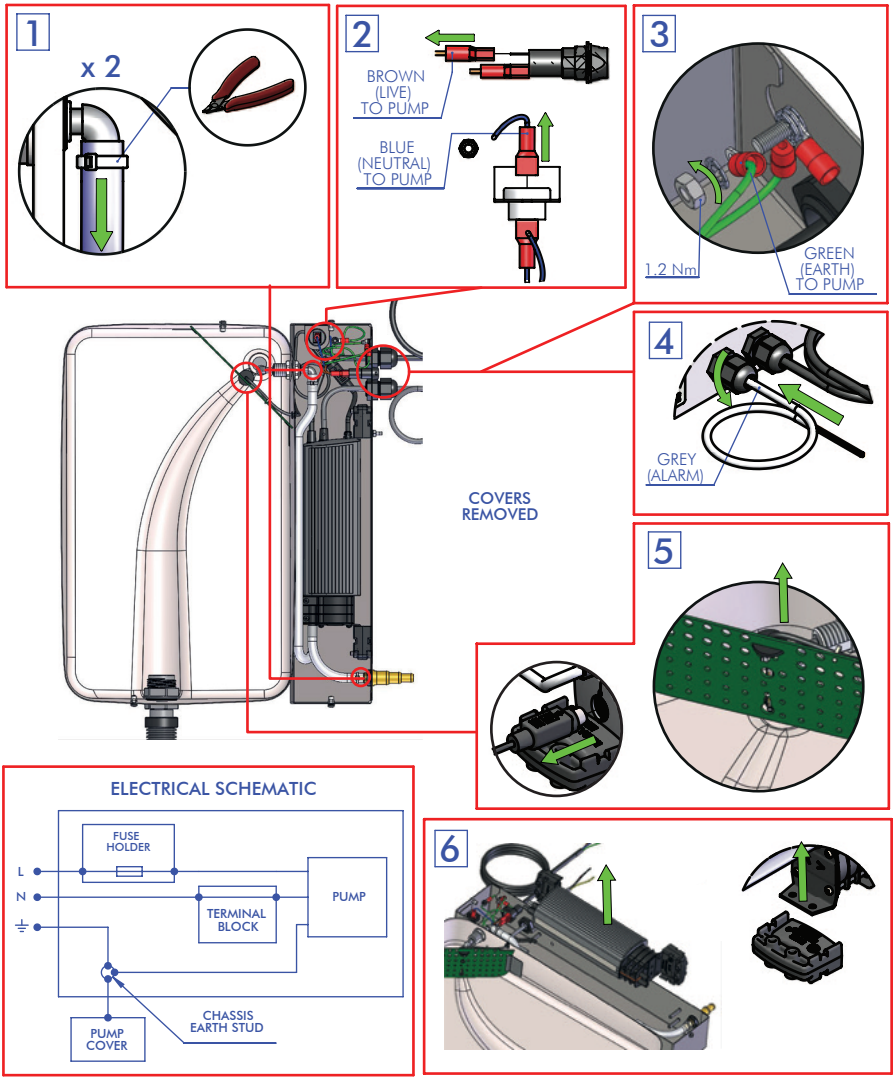

INSTALLATION IS THE REVERSE OF REMOVAL