
Panasonic
BUSINESS


# Adaptive Ducted
# Conversion to vertical
# Wired remote controller ONLY

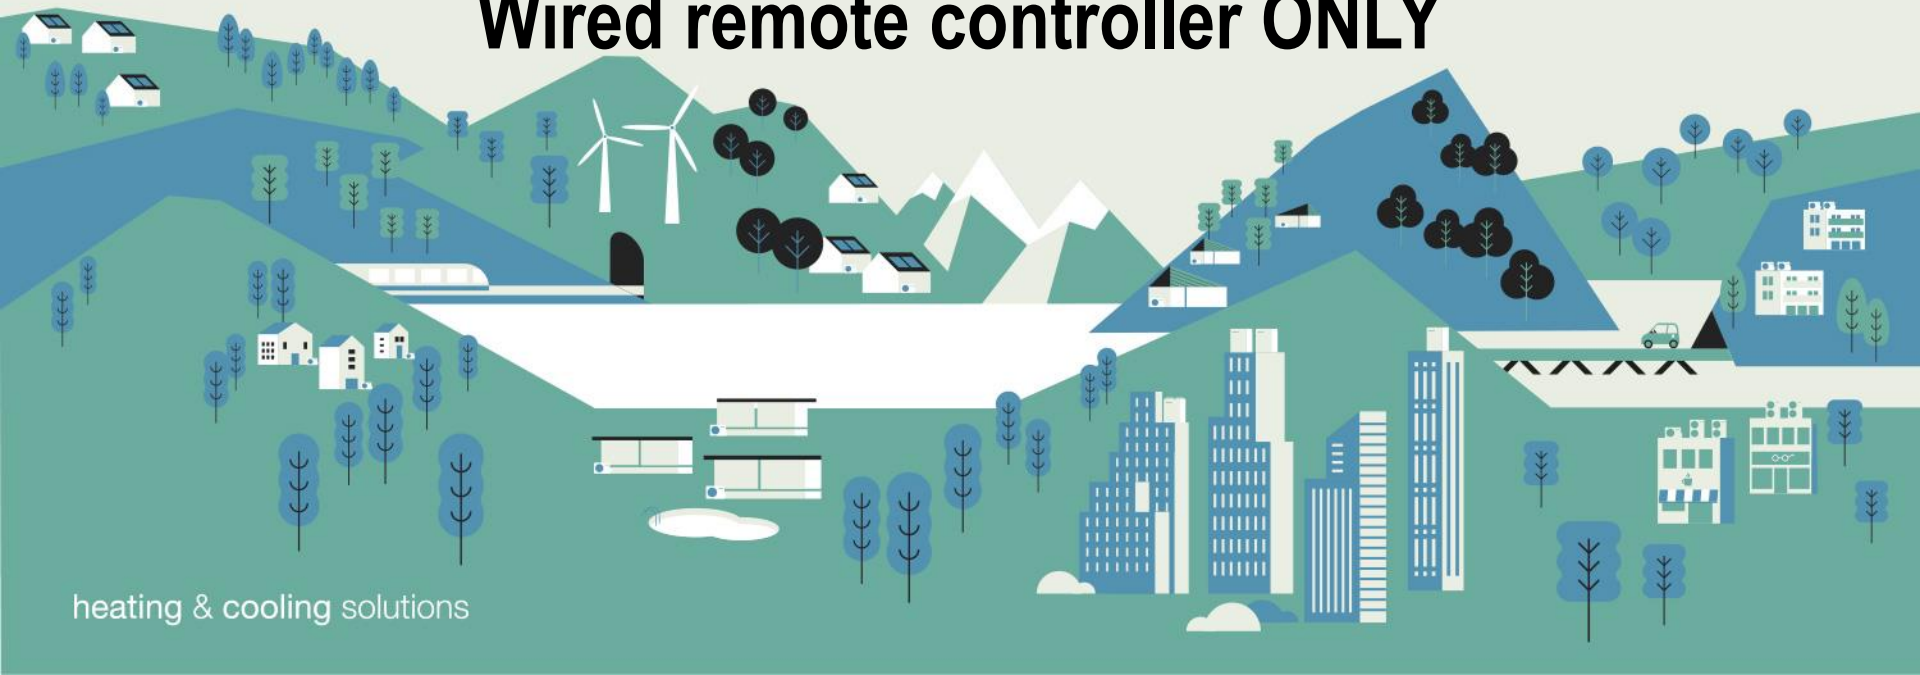


# Adapt for vertical installation


Panasonic


**One of the key benefits is the ability to adapt the unit to vertical installation**

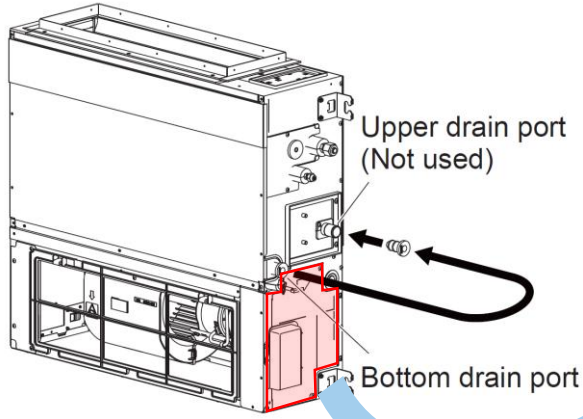


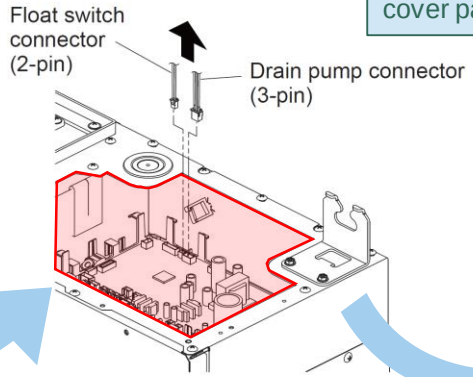
**NOTE:** Bridging jumpers can be found on the rear of the electrical cover panel



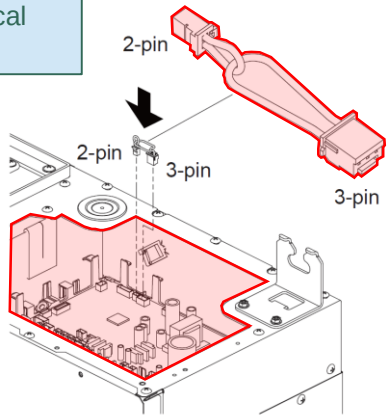

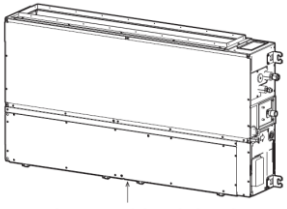Lower side air intake

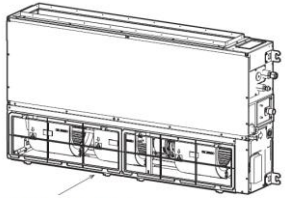

Front side air intake

**NOTE:** The drain pump cannot be used in vertical position and must be isolated. The Pump and Float Switch must be disconnected and bridged-out to prevent error messages and the system to use gravity drain only.

# Adapt for vertical installation (CZ-RTC6xxx)


Panasonic

**There are some key control settings required to convert the unit to vertical installation**

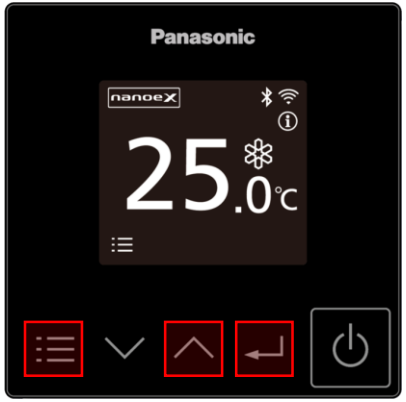



Keep pressing the ☰ , ^ and ↵ simultaneously for 4 or more seconds. This can be done while the controller is in the OFF state.

The “Maintenance func” screen appears on the LCD display.

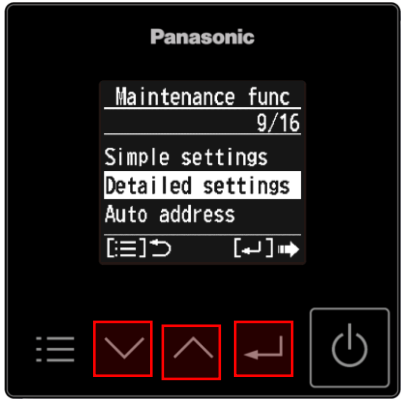



Press the v to cycle through the menus until you reach “Detailed settings” and then press ↵ to confirm.

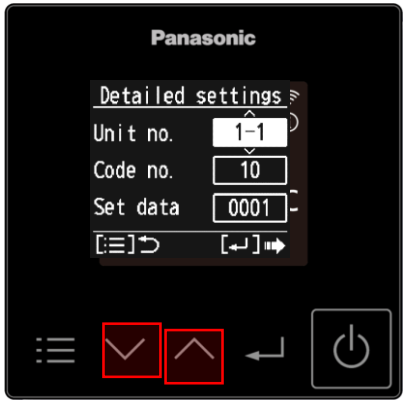


The “Detailed settings” screen will then appear on screen.

Select the unit by pressing v , or ^ , button for changes

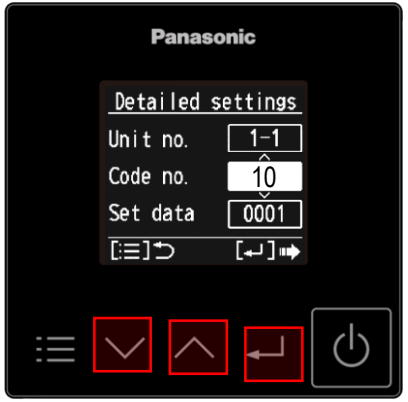



Select the “Code no.” by pressing the v button and press ↵ to allow edit.

Change the “Code no.” to “3F” by pressing the v or ^ button, and press ↵ to allow edit.

# Adapt for vertical installation (CZ-RTC6xxx)


Panasonic

**There are some key control settings required to convert the unit to vertical installation**

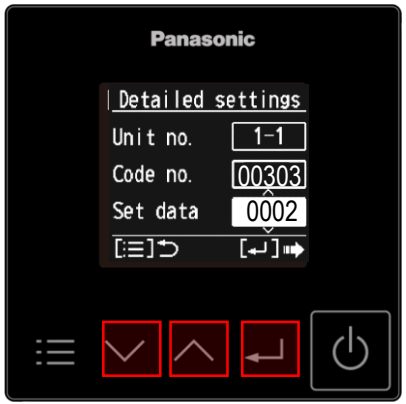


Select the “Set data” by pressing the ⌄ button and ↵ activate (“0007” or “0000” set at shipment).


Change the Set data to “0001” by pressing ⌄ or ⌃ button. Press ↵ to finalise.

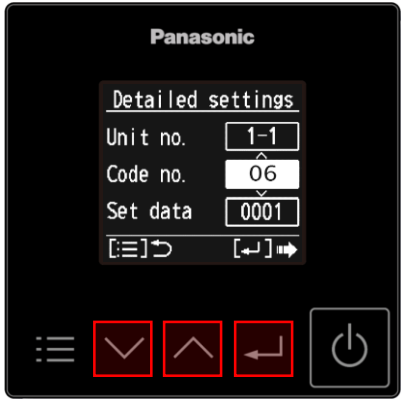


Select the “Code no.” by pressing the ⌃ button and press ↵ to active.

Change the “Code no.” to “06” by pressing the ⌄ or ⌃ button.


Press ↵ to finalise.

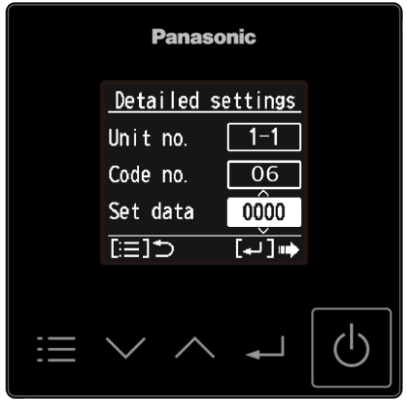


Select the “Set data” by pressing the ⌄ button. (“0004” set at shipment), and press ↵

Change the Setting Data “0000” by pressing the ⌄ or ⌃ button.

Press ↵ to finalise.

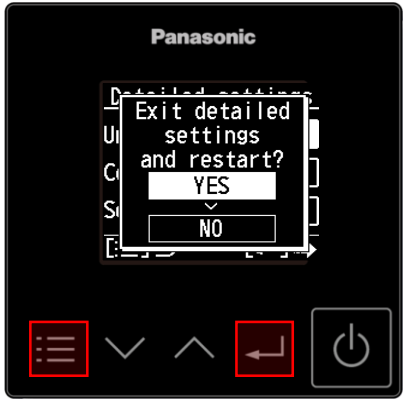


Press the ☰ button to return.


“Exit detailed settings and restart?” will be displayed.

Press ↵ to confirm “YES”. The unit will restart and the settings will be applied.

# Adapt for vertical installation (CZ-RTC5B)


Panasonic

**There are some key control settings required to convert the unit to vertical installation**

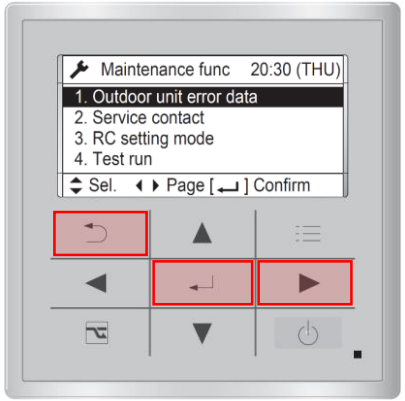



Keep pressing the ↩ , ↵ and ▶ simultaneously for 4 or more seconds.

The “Maintenance func” screen appears on the LCD display.

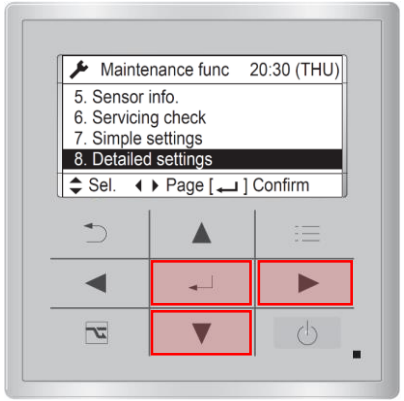



Press the ▶ and, move to the next page. Press ▼ until you reach “8. Detailed settings” and press ↵ to confirm.

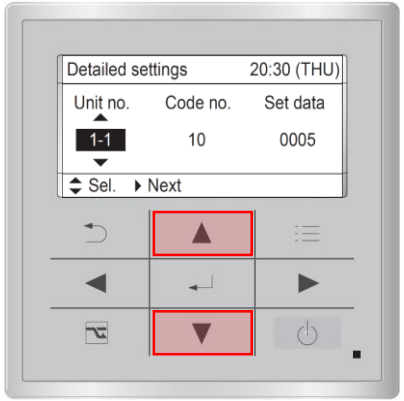


The “Detailed settings” screen will then appear on screen.

Select the unit by pressing ▼ , or ▲ , button for changes

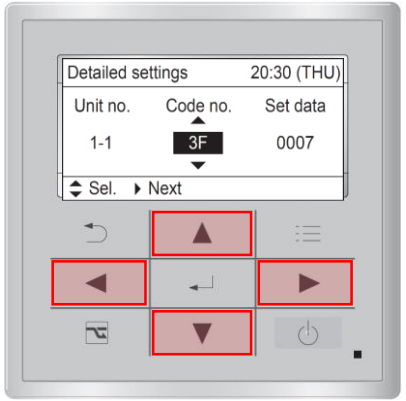



Select the “Code no.” by pressing the ▶ or ◀ button.

Change the “Code no.” to “3F” by pressing the ▼ or ▲ button

# Adapt for vertical installation (CZ-RTC5B)


Panasonic

**There are some key control settings required to convert the unit to vertical installation**

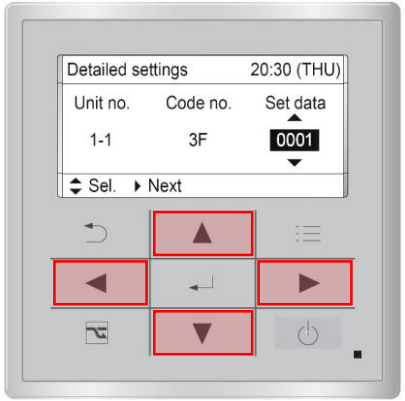



Select the “Set data” by pressing the ◄ or ► button. (“0007” or “0000” set at shipment).

Change the Set data to “0001” by pressing ▼ or ▲ button.

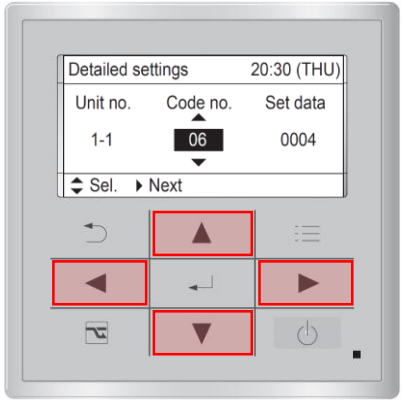



Select the “Code no.” by pressing the ◄ or ► button.

Change the “Code no.” to “06” by pressing the ▼ or ▲ button

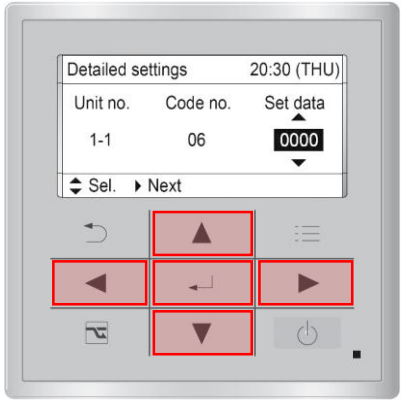


Select the “Set data” by pressing the ◄ or ► button. (“0004” set at shipment)

Change the Setting Data “0000” by pressing the ▼ or ▲ button. Then press the ↵ button.

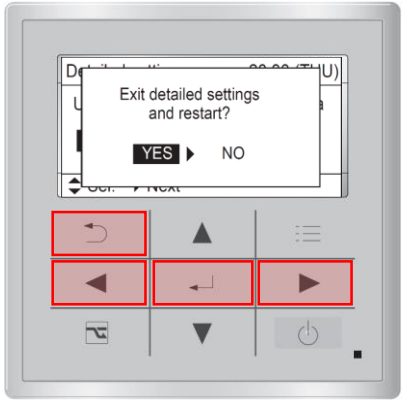


Select the “Unit no.” by pressing the ◄ or ► button and press the ⮌ button.

The “Exit detailed settings and restart?” screen will be displayed. Select “YES” and press the ↵ button.